


To other side of C339 not joined to R328

To junction of C339 (.1uf) and R328 (1k) Also remove C339

To center tap of deviation pot, VR404, on top of P.C.B. near IC #NJM4558

Hang up switch
Open = monitor
grounded = decode


Same same point as A.F. input

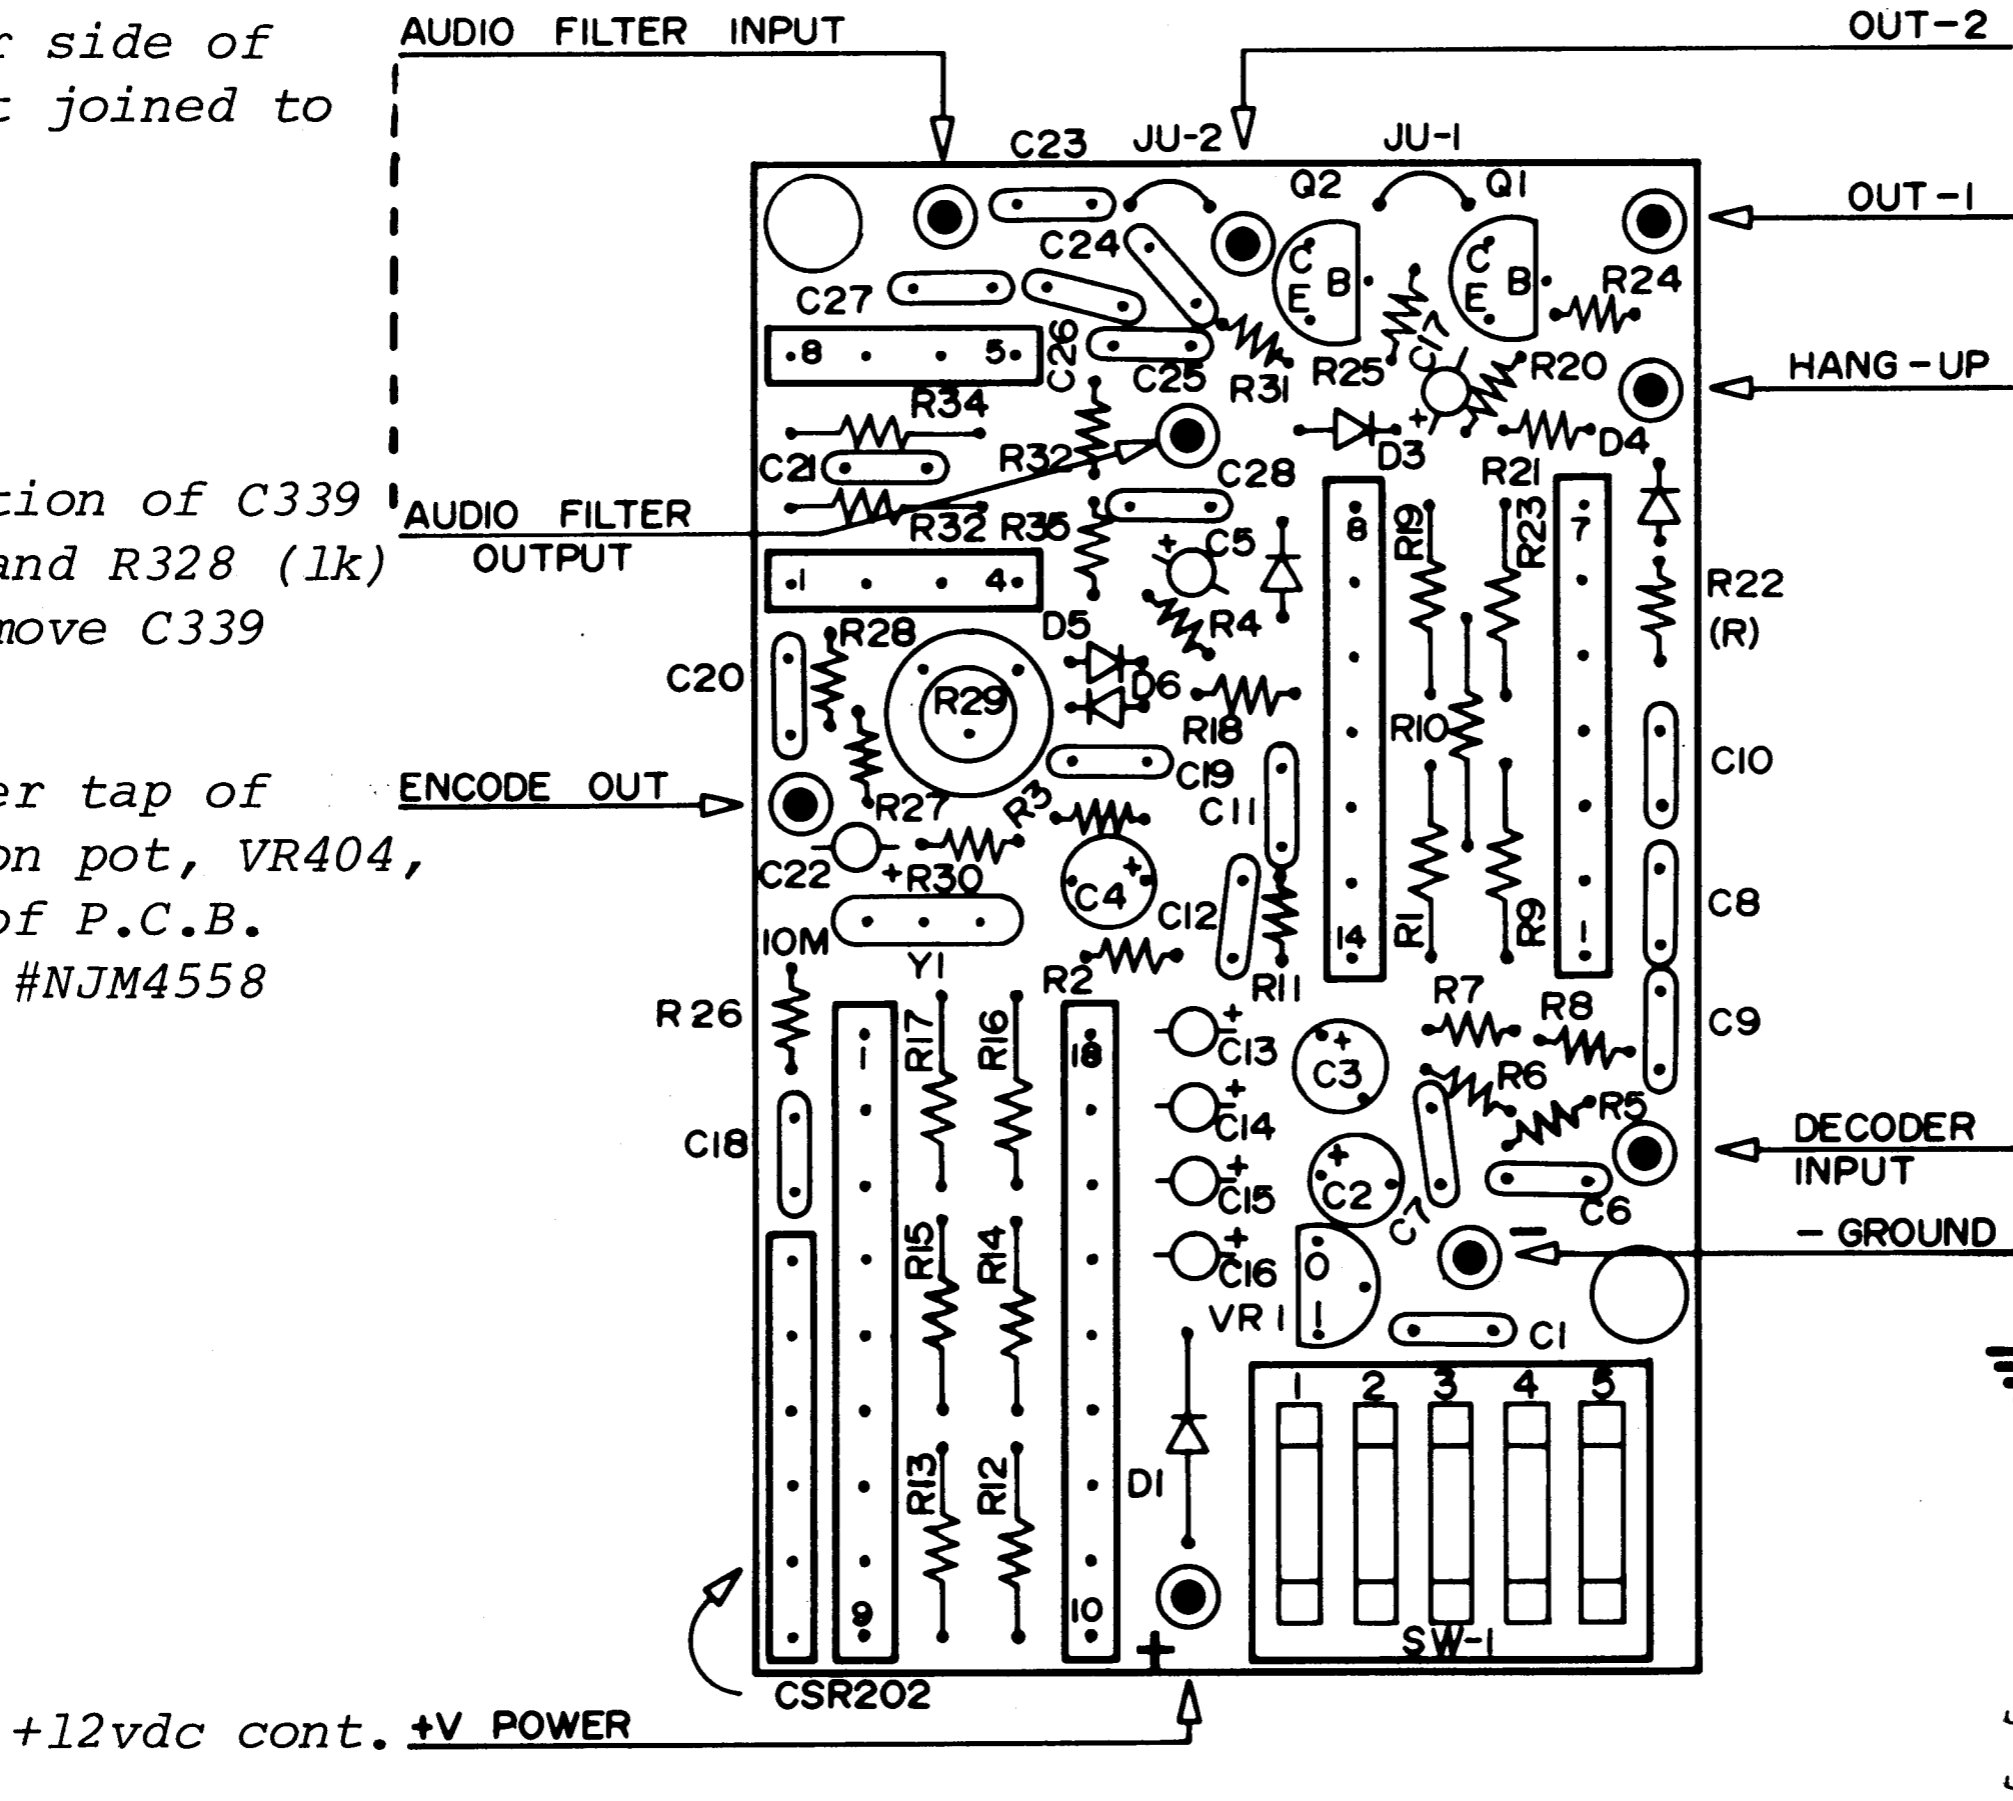

NOTE: TS-32 hooked to +12vdc cont.

SPECIAL NOTICE

WHEN MOUNTING THE TS-32 WITH A 90 DEGREE ANGLE BRACKET AGAINST THE PCB, BE SURE TO USE THE TWO FIBER SPACERS PROVIDED BETWEEN ANGLE BRACKET AND PCB. IF THIS IS NOT DONE, THE BRACKET WILL SHORT OUT FOILS ON THE PCB

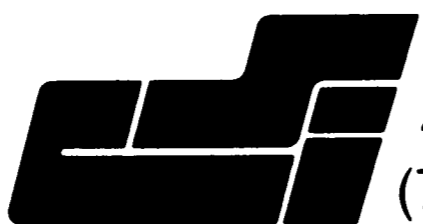

Communications Specialists

426 W. Taft Ave., Orange, CA 92667

(714) 998-3021 (California) / (800) 854-0547