

TS-32A INSTRUCTION SHEET



NOTES

If tone level is insufficient when the TS-32A is used, make sure that the resistor that couples the tone from the tone amplifier to the Mod pot is 1k and *not* 10k. This resistor is R128 in the Aerocom Eight. If the resistor is 10k, it may be changed with a 1k resistor or bridged with one.

Set tone level to ± 5 kc with pot on TS-32A.

Leave JU-1 in if negative squelch is used.

Remove JU-1 if positive squelch is used.

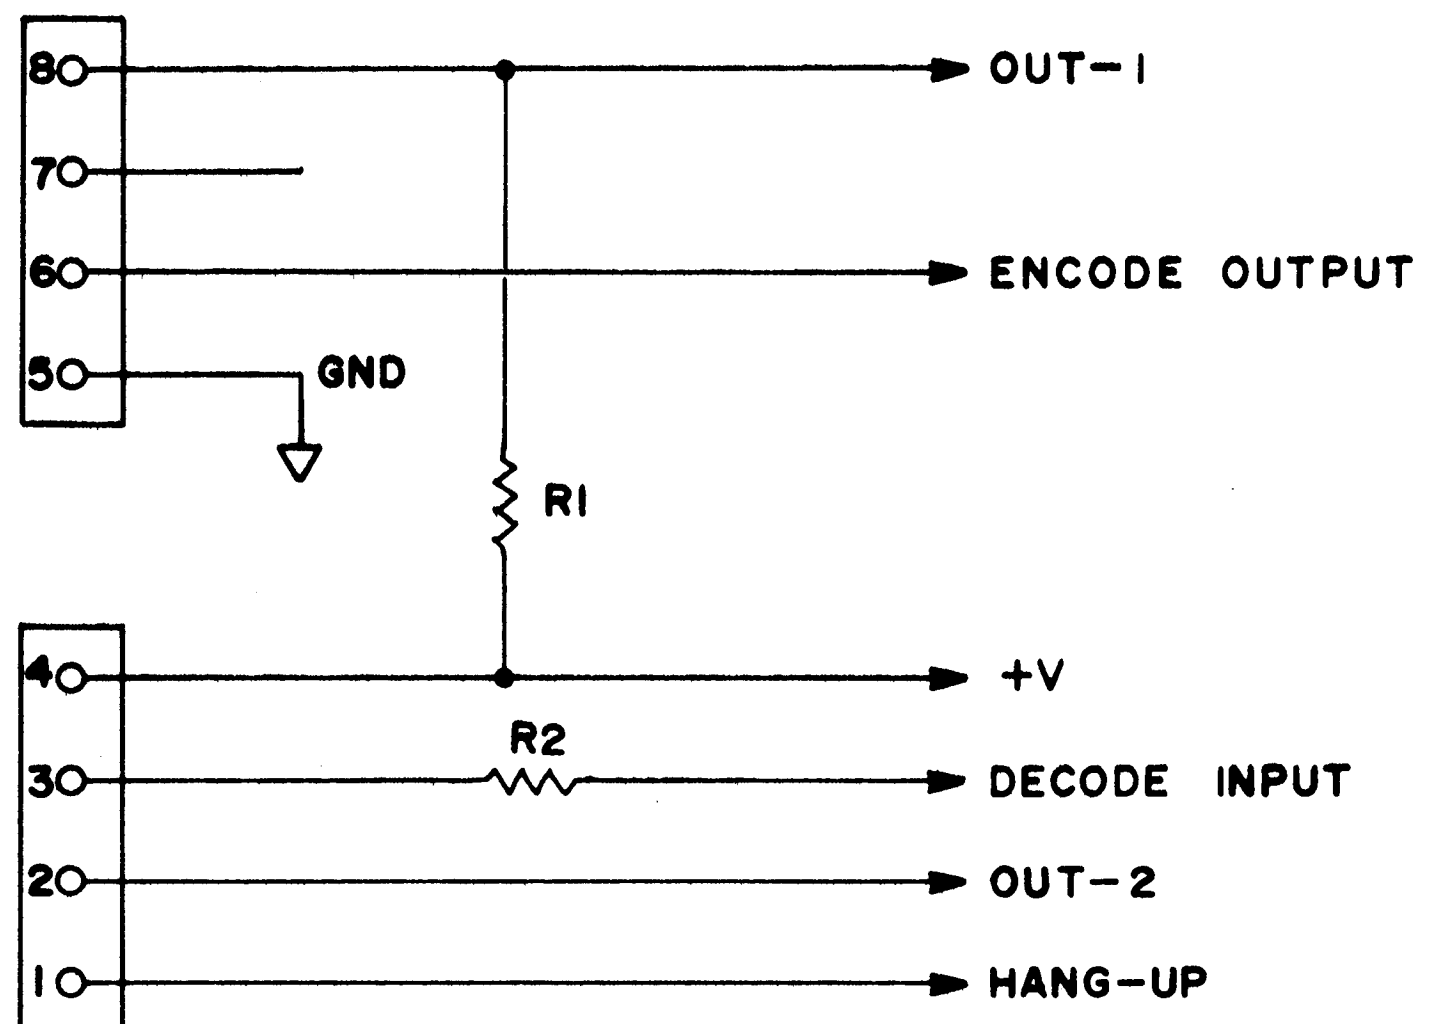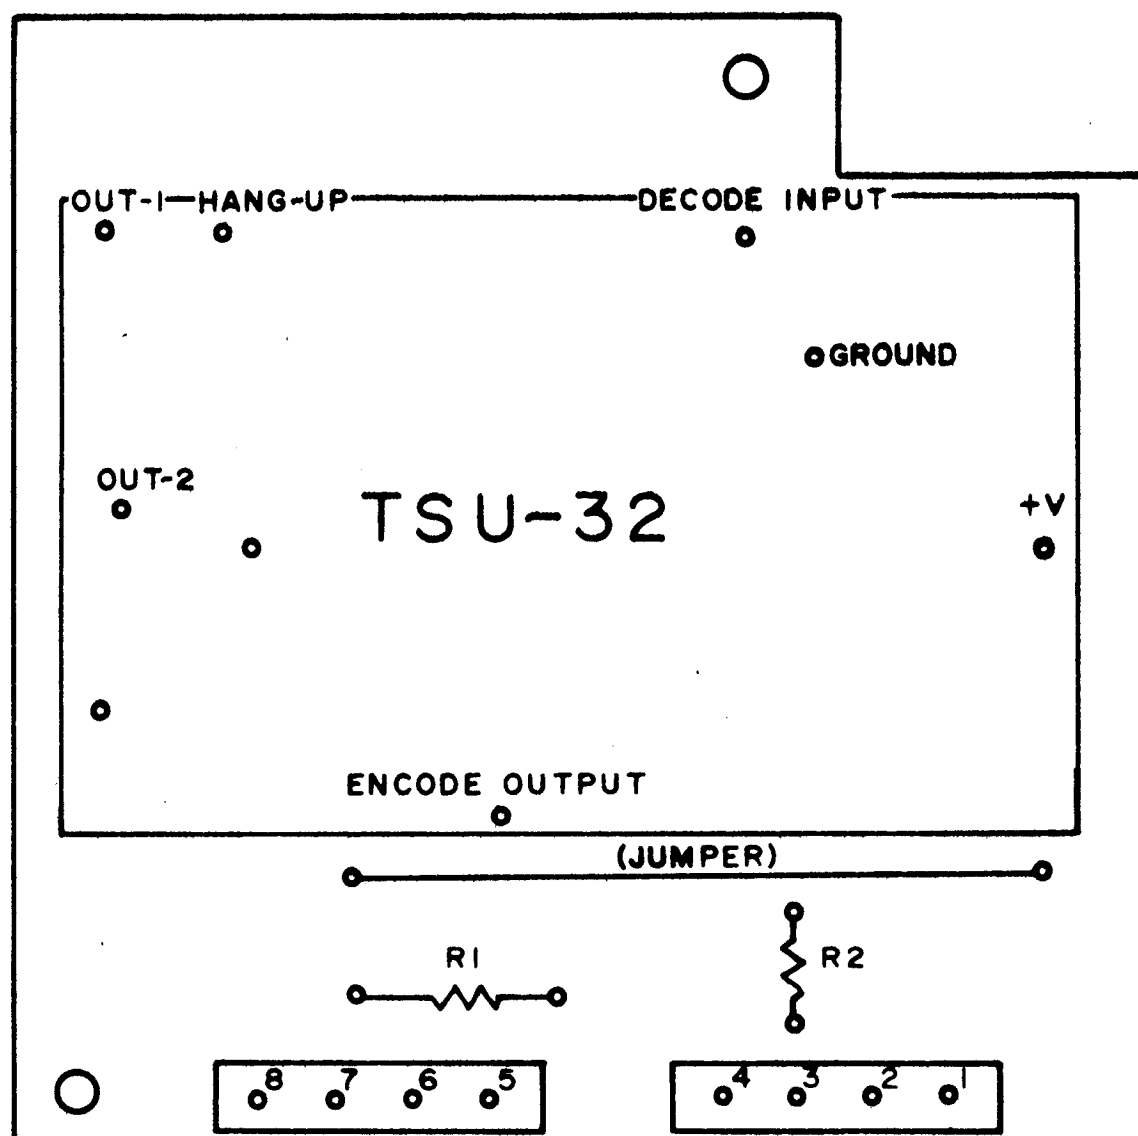

PARTS LIST — TS-32A (Aerotron)

R1	06-1024	1K	¼ Watt Resistor	\$.10 ea.
R2	06-1054	1M	¼ Watt Resistor	.10 ea.
7 ea.	05-1008		Amp Chassis Receptacles	.28 ea.
8 ea.	05-1002		Berg Chassis Receptacles	.40 ea.
1 ea.	30-7035		1½ in. Wire Jumper	.03 ea.
1 ea.	84-1006		Printed Circuit Board	2.60 ea.

NOTE

Carefully use a screwdriver to evenly pry up edges of TSU-32 as its pins are easily bent.